

## INSTALLATION AND OPERATION AR 4201 - ( )

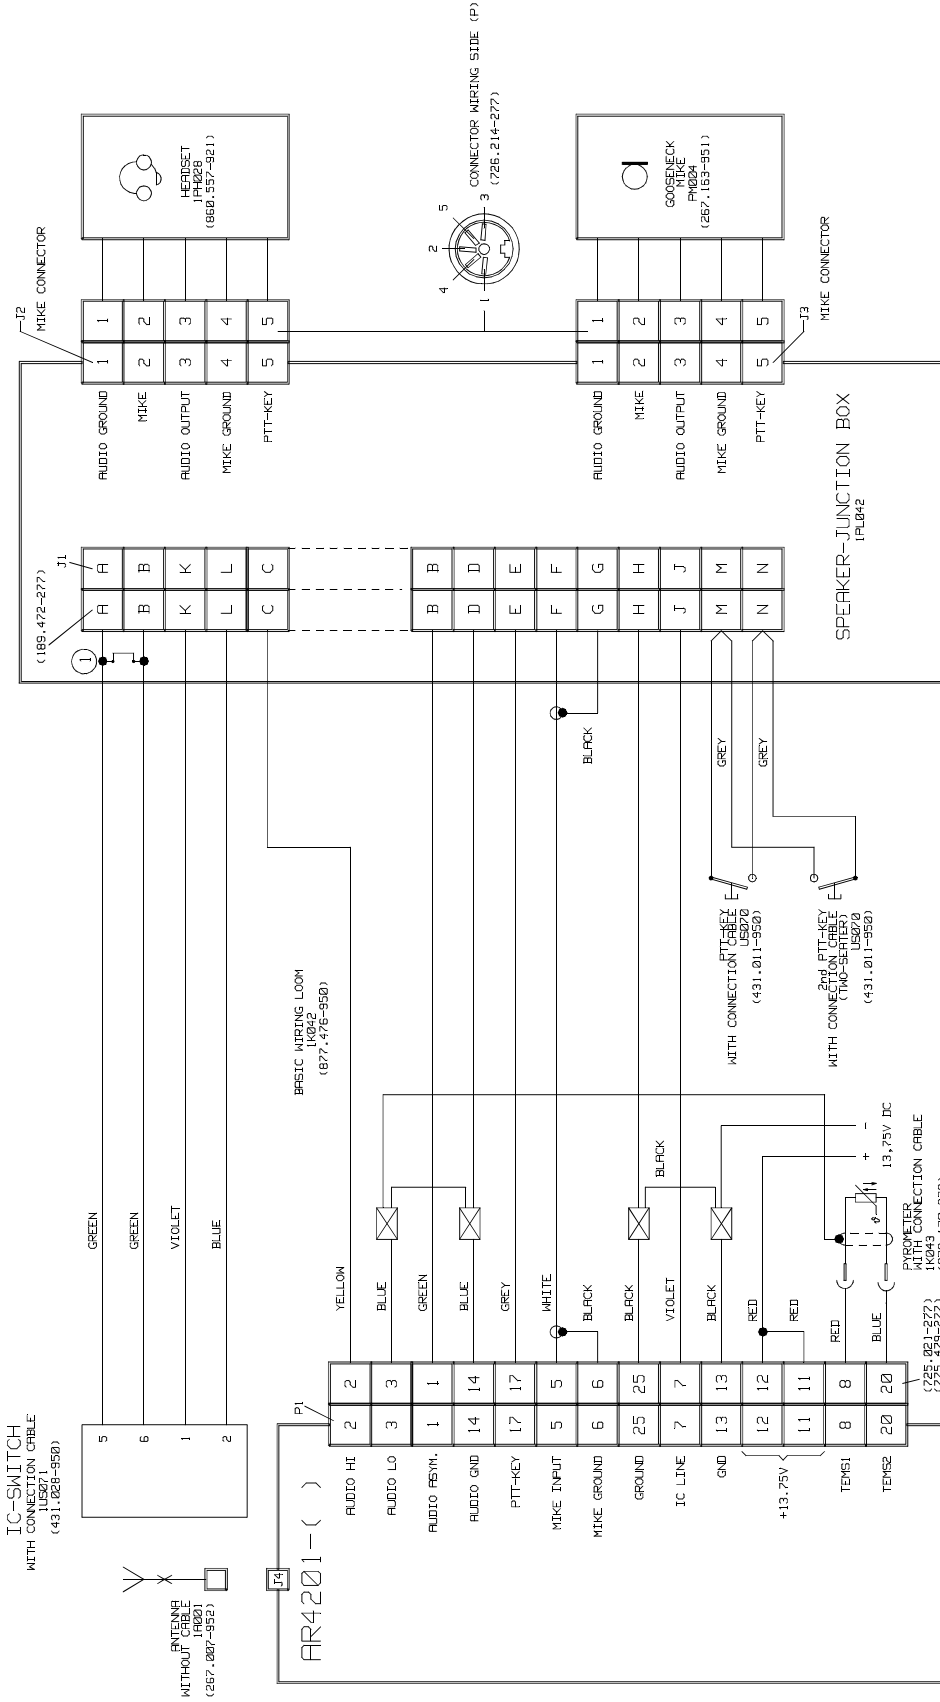


Fig. 2-6 Interwiring AR 4201 - ( ) with speaker junction

CAUTION : THE MAGNETIC FIELD OF THE SPEAKER WILL EFFECT THE COMPASS.  
THEREFORE MINIMUM SPACE BETWEEN SPEAKER AND COMPASS MUST BE 1,3 m WHEN SELECTING SPEAKER LOCATION!

NOTE

① JUMPER IF NO IC-SWITCH IS USED.NO CONNECTION AT K AND L.

( ) STOCK NO.

WIRING DIAGRAM AR4201 with BASIC WIRING LOOM and SPEAKER-JUNCTION BOX