

## INSTALLATION AND OPERATION

AR 4201 - ( )

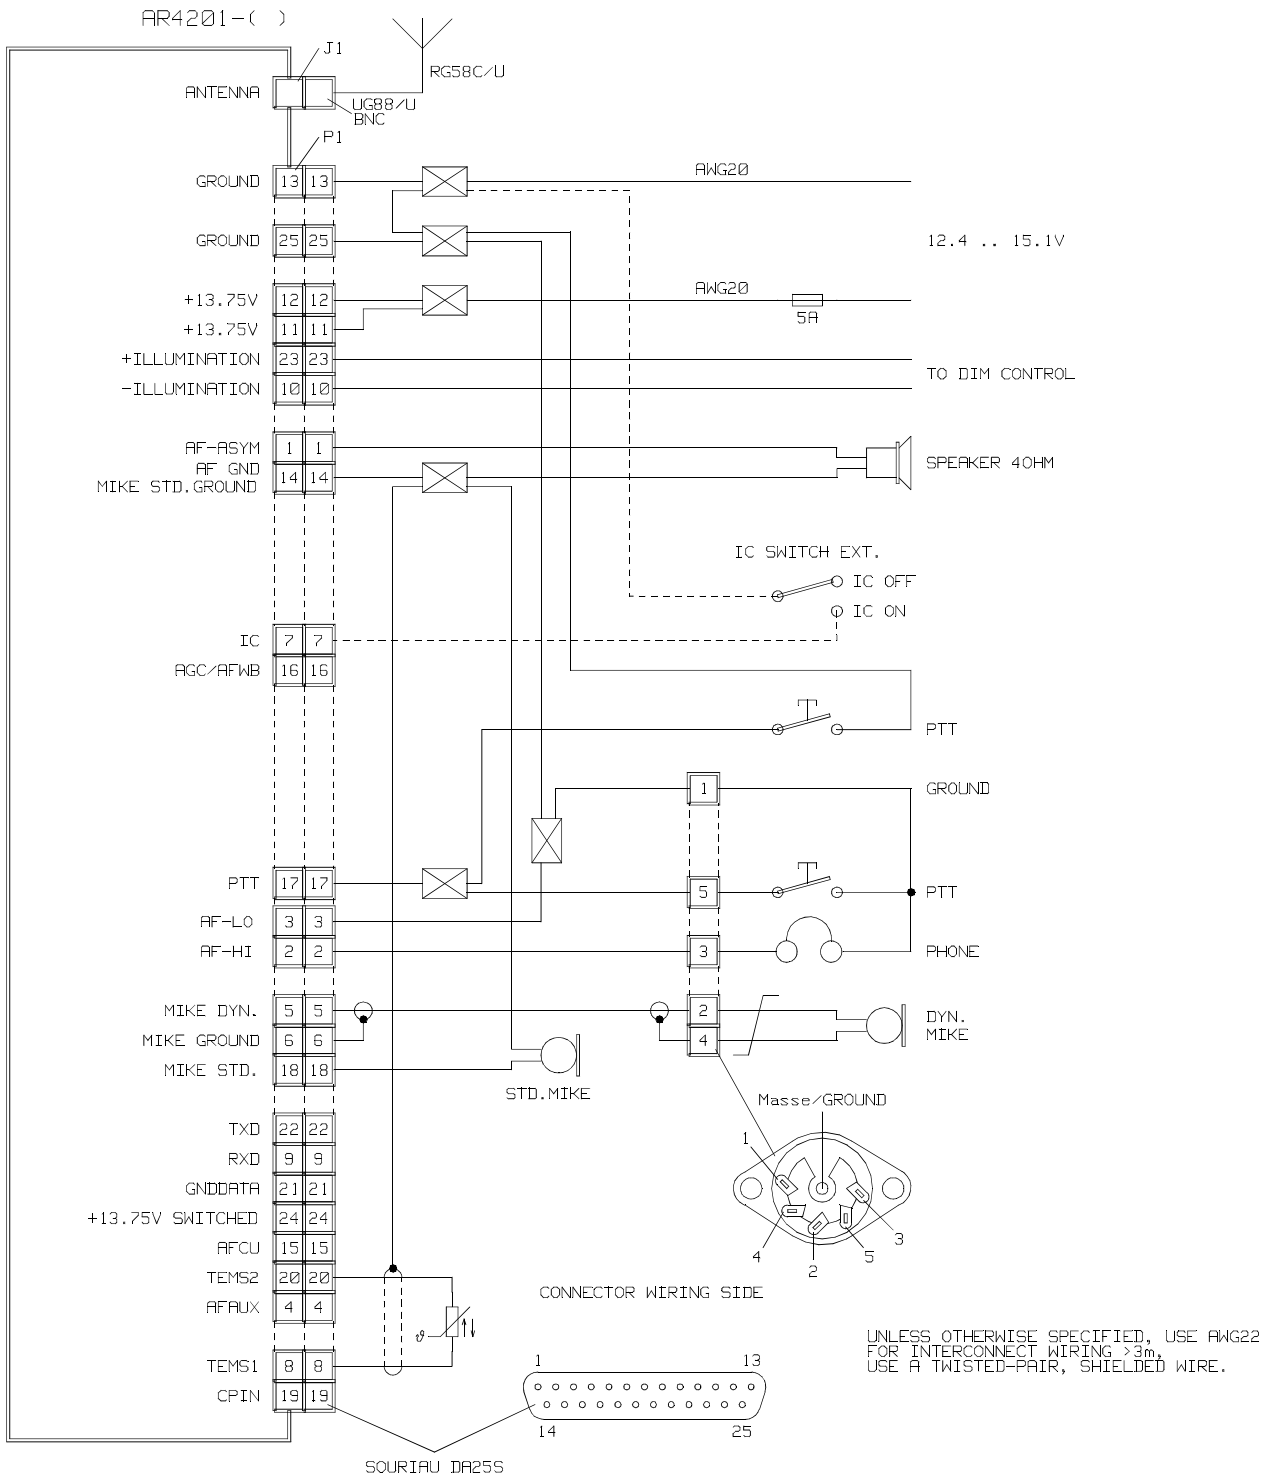


Fig. 2-4 Interwiring of the VHF transceiver with dynamic mike